



KLN Bidet Assembling Instructions

Congratulations on the purchase of your new KLN Bidet! We know you will get many years of enjoyment out of this great product.





This instruction manual is designed to provide you with all the information necessary to fully and properly install and operate your KOR KLN Bidet.

If you need help installing your KLN Bidet, please visit kortoilet.com/installation for detailed instructional videos. If you need immediate support please call or text us at 855-434-5567 or contact our support team at support@kortoilet.com.


TOOLS NEEDED:

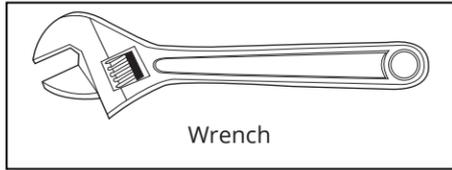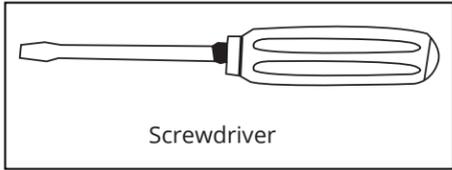

What's Included

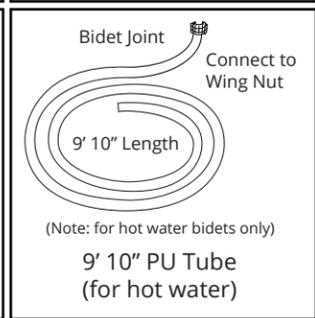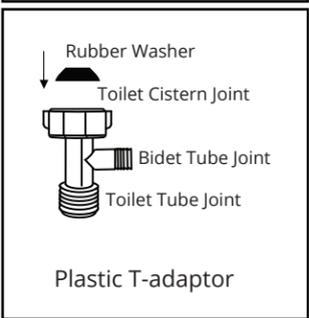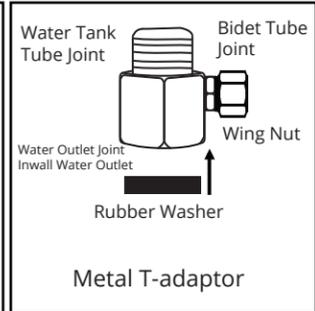
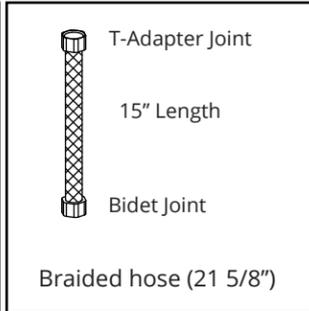


Bidet Functions and Parts

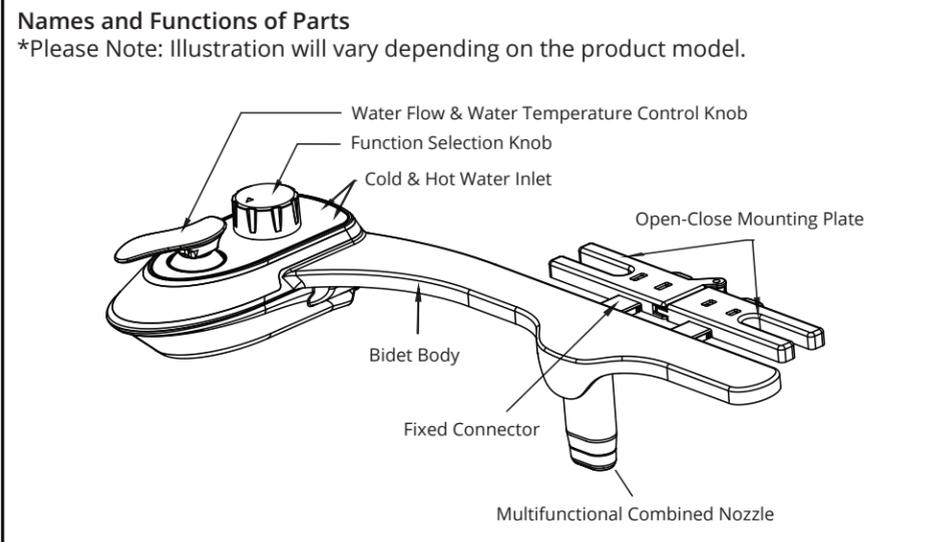

INSTALLATION


1 Before you start, make sure that the water is turned off to the toilet. Turn the valve clockwise to turn off the water to the toilet. You'll know the valve is closed when no water fills the tank after you flush the toilet

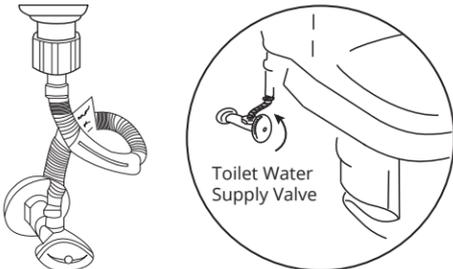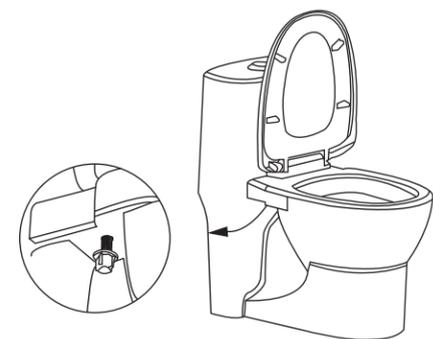

2 Unscrew the screws on the toilet seat until there is about a 3/4" gap between the lid and the toilet base

3 Open the bidet mounting plate. Aim the two U shaped prongs at the bolts which have been loosened

4 Push the mounting plate forward until you hear snap. The mounting plate is now secure


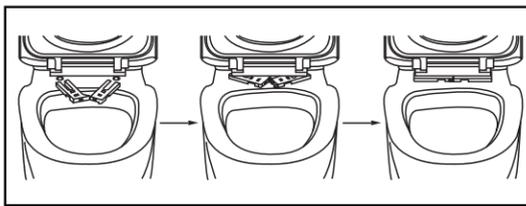


Open the open-close mounting plate. Aim the two left and right U-shaped apertures at the two unscrewed bolts. Push the mounting plate toward the gap between the toilet seat and the toilet in order to make the mounting plate to be closed. When the positioning convex point snap into the positioning concave hole, you can hear clicking sound.


5 Align the bidet body with the grooves of the mounting plate, then push into the open grooves (Fig. 5)

6 Adjust the bidet nozzle position so it is in the center of the toilet


7 Tighten the toilet screws until snug (Fig. 7)

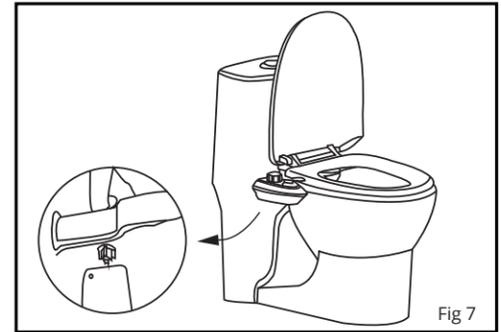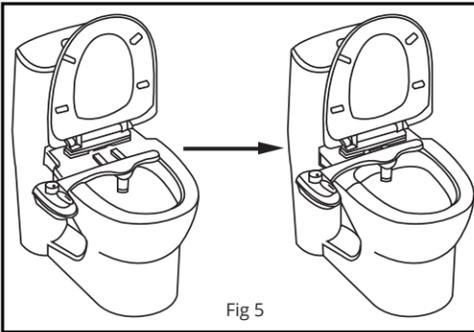


8 Make sure the black rubber washer is inserted into the top of the plastic T-adaptor (Fig. 8A and 8B)

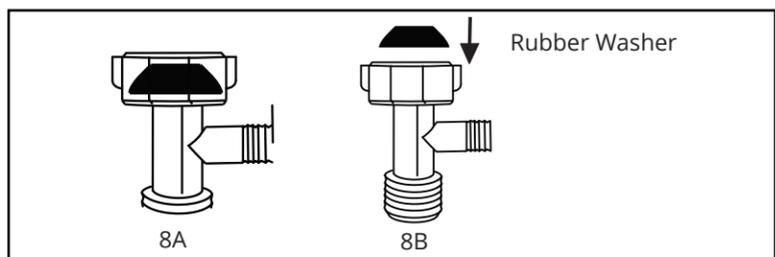


9 Make sure you have closed the toilet water supply valve. Flush the toilet and make sure there is no water in the cistern. Connect the Plastic T-adaptor to the cold water supply valve

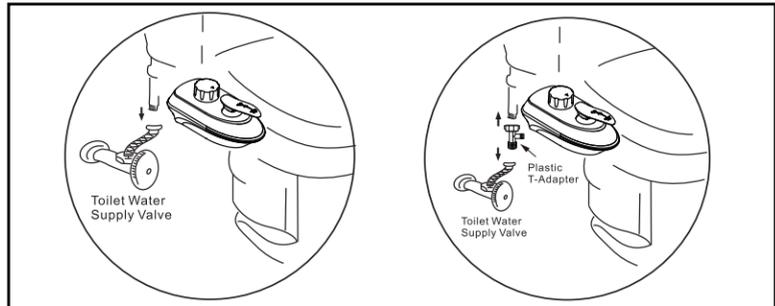


10 Connect the metal braided hose to the Plastic T-Adaptor

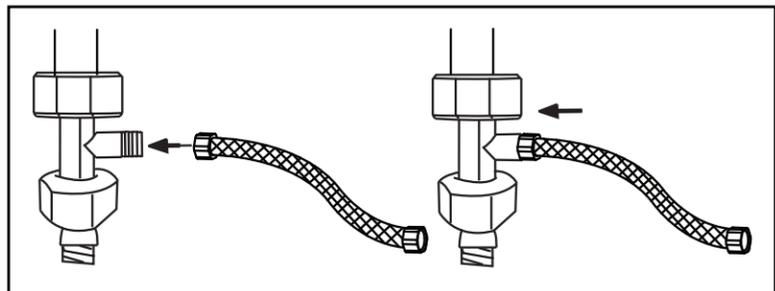

11 Connect the braided metal hose (cold water) and PU Tube (hot water if applicable) to the bidet valves

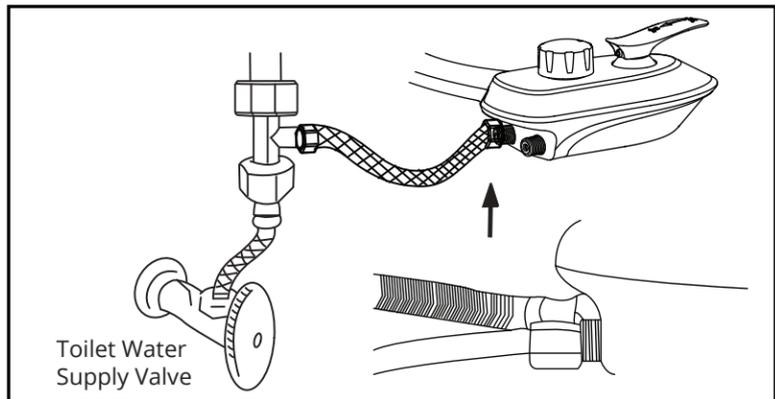


12 Screw in PU tube with wrench

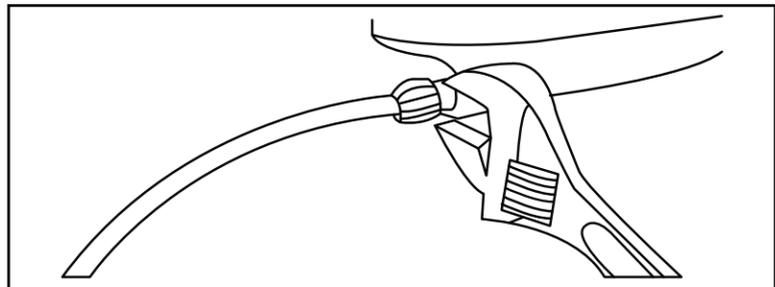


13 Connect the PU tube to the hot water supply, then connect the PU Tube to the T-adaptor


A T-adaptor

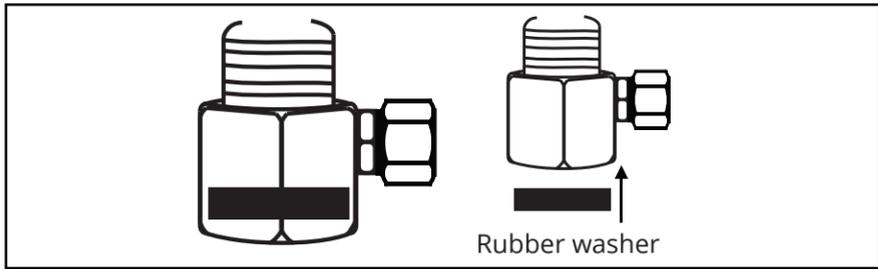

14 Assembled Unit

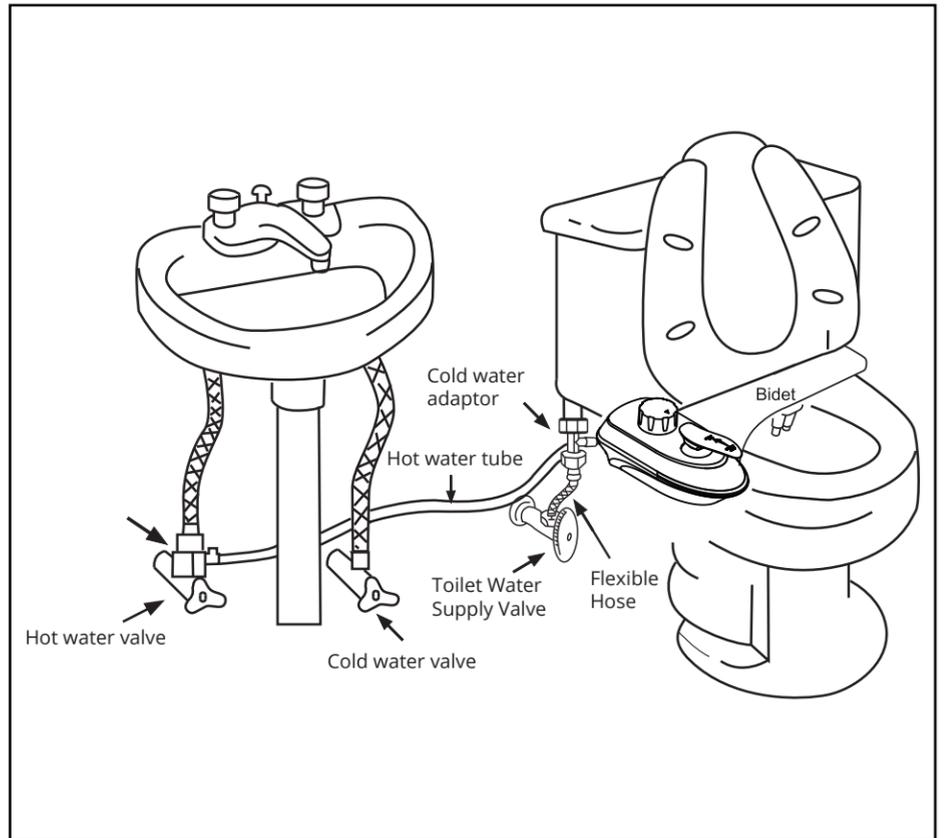

B Connect the hot water supply

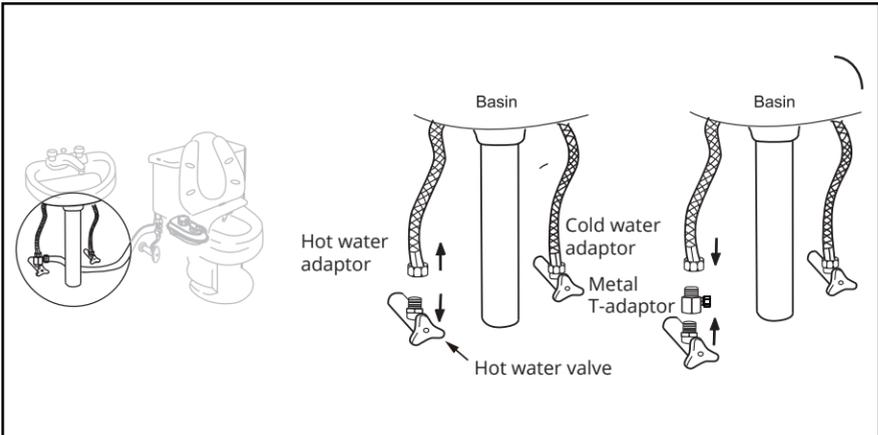

C Connect the hot water supply

